
JARDAN

Burton Chair

Assembly and Operation Guide

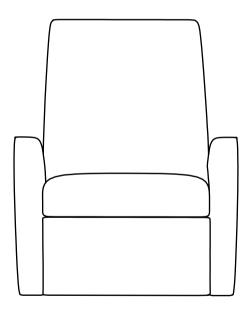





JARDAN

Burton Chair



Make sure no obstacles are in the chair's path. Make sure the chair is not touching any walls.





Keep children away from chair recliner control unit. There is risk of injury.





Keep all electrical components away from liquids.






Do not open any of the components - the motor, control box or switch. There is a danger of electric shock.



ASSEMBLY NOTE


The external transformer should not be placed in the void area underneath the chair. The transformer should be placed in an open area to reduce the potential for the cables to become damaged by the chair's lift mechanism. It is also recommended not to place the transformer near a heat source or to cover the transformer.

Assembly instructions

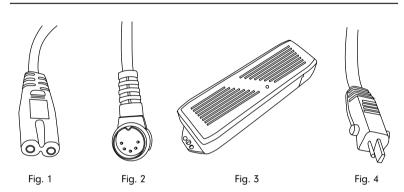

- Working at the back of the chair, connect cable (fig 4) under the chair to Transformer (fig 3), and plug supplied figure eight cable (fig 1) into transformer (fig 3).
- Plug Control Plug (fig 2) into control port under the chair.
- Plug Chair into mains. Light on transformer will turn green.
- Using controller, stand clear of moving parts, and test to ensure chair is operational.
- Return chair to seated position after test.

Operation

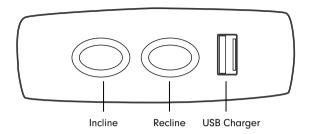

To allow for sufficient room for recline, the chair must be placed clear from any walls or surrounding objects. Your Recliner Chair is operated by a controller located on the right-hand side of the chair arm rest. Sit in the chair before operating.

The handset for the single motor chair has 2 buttons. One will recline the chair and the other will incline the chair. The chair will only move when the selected button is continuously pressed. To stop in any position, simply release the button. To recline the chair, press the recline button and hold, until the chair is in the required position. To incline the chair, press the incline button and hold until the seat is in the raised position.

Battery Backup

The battery backup feature enables the lift chair to be powered to the raised position (once only) in the event of a power failure.

To enable the battery backup, fit $2 \times 9V$ batteries (not supplied) to the compartment underneath the transformer (fig 3).

Replace the batteries if the lift chair has been used during a power failure.

Caution

Do not operate the chair unless you are certain there are no children or pets anywhere near or at the rear of the chair.

Do not allow any liquids to come in contact with the hand control and any spilt drinks or fluids on the seat are to be immediately removed to avoid possible contact with the electrics underneath. Remove power supply immediately.

Always leave the Recliner in an upright and closed position after use.

Keep hands and feet clear of the footrest mechanism and any gaps.

Don't sit on the armrests of Recliner.

Other Specifications

Duty Cycle 10% (2 mins on, 18 mins off)

Power Rating DC24V

Max Operational Weight 120kg

Care & Maintenance

Our philosophy is simple, we only make furniture that lasts. Over their lifetime our products will need a little care and attention to ensure they can be enjoyed by generations to come. The following information will help you care for your Jardan products in the best possible way.

FABRICS

Vacuum fabrics on a weekly basis to remove dust, dirt and any loose feathers. Treat spills and stains as soon as possible by wiping with a damp cloth, do not treat with chemical cleaners or scrub as this can alter the fabrics appearance. We recommend contacting a specialist fabric cleaner to treat difficult stains. To prolong the life of your upholstery, we recommend annual cleaning by a specialist fabric cleaner. Direct sunlight may cause colour change and aging of your fabric, for best performance we recommend positioning your furniture out of direct UV light. Please refer to the Materials Library on our website for care information specific to your fabric.

LEATHER

Leather is a natural product characterised by the unique tone and individual markings that the animal has acquired during its life which may include creases and stretchmarks, scars and insect bites. Some softening and stretching of the leather is to be expected with use. Wipe leather with a clean, damp cloth on a weekly basis to remove dust and dirt particles that can work their way into the hide and abrade the surface. To treat difficult stains, we recommend contacting a specialist leather cleaner who can also assist with regular treatment of the leather to nourish and prolong the life of leather upholstery.