



## Model XRV01, XRV01Z Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty	Unit
001	850D50-7	XRV01 NAME PLATE	1	
002	266045-0	TAPPING SCREW 4X20	9	PC.
003	187974-3	HOUSING SET	1	
003	C10 802J50-9	CAUTION LABEL	1	
003	D10	INC. 29	0	
004	643843-3	TERMINAL	1	PC.
005	650580-2	SWITCH SGE120C-4	1	PC.
006	231298-0	COMPRESSION SPRING 6	1	PC.
007	419511-8	SWITCH LEVER	1	PC.
008	421961-5	WATERPROOF COVER	1	PC.
009	322935-8	CAP	1	PC.
010	961002-0	RETAINING RING S-6	1	PC.
011	210018-5	BALL BEARING 626	1	PC.
012	210018-5	BALL BEARING 626	1	PC.
013	331503-6	PIPE 25	1	PC.
014	322934-0	UNBALANCER	1	PC.
015	211016-2	BALL BEARING 626LLB	1	PC.
016	211016-2	BALL BEARING 626LLB	1	PC.
017	421578-4	RUBBER RING	1	PC.
018	443101-5	FELT RING	1	PC.
019	326203-1	JOINT	1	PC.
020	163534-5	FLEXIBLE WIRE	1	PC.
021	416244-6	NUT 36	1	PC.
022	163537-9	FLEXIBLE HOSE	1	PC.
023	266045-0	TAPPING SCREW 4X20	4	PC.
024	316893-8	BEARING BOX	1	PC.
025	211056-0	BALL BEARING 629LLB	1	PC.
026	911118-1	PAN HEAD SCREW M4X12	2	PC.
027	318038-4	SUPPORTER	1	PC.
028	629836-4	DC MOTOR	1	PC.
029	187974-3	HOUSING SET	1	
029	C10 802J50-9	CAUTION LABEL	1	
029	D10	INC. 3		
030	154948-9	COVER COMPLETE	1	PC.
030	C10 810195-9	CAUTION LABEL	1	PC.
031	126206-3	FLEXIBLE ASSEMBLY	1	
031	D10	INC. 9-20,22		
A01	***DC18RC	DC18RC FAST CHARGER	1	PC. (XRV01)
A02	BL1830	BATTERY BL1830 SET	2	SET (XRV01)
A03	141481-0	PLASTIC CARRYING CASE	1	PC. (XRV01)
A03	C10 417383-5	LATCH	2	PC. (XRV01)
A04	450128-8	BATTERY COVER	1	PC. (XRV01)
D01	652008-6	PAN HEAD SCREW M3.5X7	2	PC.
D02	654086-2	RECEPTACLE	2	PC.
D03	654117-7	INSULATING TERMINAL	2	PC.
D04	654199-9	RECEPTACLE	2	PC.