

SuapPad[®]

RV SNAPPAD

MINI SQUARE 5 4 PACK INSTALLATION INSTRUCTIONS

1-866-923-9538 | INFO@RVSNAPPAD.COM | RVSNAPPAD.COM





Congratulations on joining the SnapPad family!



Very Important Notes:

It is critical that you install the correct SnapPad on the proper foot. Please triple check prior to installing your SnapPads. Permanent damage could result from trying to install on the wrong landing foot, resulting in your warranty being voided. Your Mini Square 5's are designed to work with 5.5" square jack feet that are commonly found on BAL[®] and LCI/Lippert[®] stabilizers.

*Trademark is owned by mark owner. SnapPad and its goods are not affiliated with or endorsed by the mark owner.

O Travel Trailer Detailed Instructions

INSTALLATION TIME: 3 - 6 MINUTES PER PAD.

- SnapPad installation should be performed on a level or near level surface preferably a hard surface (concrete or asphalt). Wheel chocks should be placed in front of and behind the RV wheels for additional safety.
- Be sure to thoroughly clean and dry your landing feet prior to installing your SnapPads.
- Spread a small bead of concentrated dish soap around the lip of the SnapPad and metal landing foot to aid in installation. **Do NOT use** any petroleum based lubricant, such as WD-40[®], as it may negatively react with the binder in your SnapPads.
- Feel free to use a block during installation to reduce the jack travel.
- As travel trailer stabilizer motors are not strong we recommend using the manual hand cranks in order to install the pads. Be careful not to put too much pressure on the stabilizers which could cause the trailer to lift and potentially bend the stabilizer arms.
- Extend your jacks until about 2 inches from the pad then stop so you can properly align your jack and SnapPad. **KEEP YOUR FINGERS AND ANY FOREIGN OBJECTS CLEAR WHEN LOWERING THE JACK INTO PLACE.**
- Carefully place and center your SnapPad under the landing jack foot. Continue to lower the landing jack until it touches the SnapPad. If you feel that the landing pad is not centered on the SnapPads, retract the landing gear enough to re-center the SnapPads and proceed with extending the landing gear to complete the SnapPad installation.
- Do not put the full weight of the RV on them as the arms of the stabilizer cannot take the weight of the RV. Use a little soap, put some pressure on them and only if needed, use a screwdriver to get behind it to lift the lip of the pad over the top of the foot.
- If your lip hasn't fully engaged, make sure the entire SnapPad is supported underneath the ground or block. If not, retract the jack and reposition the base to ensure the entire SnapPad base is supported.
- Once installed, wipe off any excess soap and enjoy the grip and stability your SnapPad provides.

O Fifth Wheel Detailed Instructions

INSTALLATION TIME: 3 - 6 MINUTES PER PAD.

- SnapPad installation should be performed on a level or near level surface preferably a hard surface (concrete or asphalt). Wheel chocks should be placed in front of and behind the RV wheels for additional safety.
- Be sure to thoroughly clean and dry your landing feet prior to installing your SnapPads.
- SnapPads MUST FIRST BE INSTALLED ON THE FRONT JACKS before continuing to the rear 2 or 4 leveling jacks. Front jack installation MUST BE DONE while the RV is hitched up to the truck. For safety, also connect the RV's break-away cable to the truck before installation.
 Feel free to use a block during installation to reduce the jack travel.
- Operate your jacks manually and install your SnapPads one at a time. If your jacks deploy in pairs, take note which jack hits the ground first and start there.
- Spread a small bead of concentrated dish soap around the lip of the SnapPad and metal landing foot to aid installation. **Do NOT use any petroleum based lubricant, such as WD-40**[®] **as it may negatively react with the binder in your SnapPads.**
- Extend your jacks until about 4 inches from the ground then stop so you can properly align your jack and SnapPad. **KEEP YOUR FINGERS AND ANY FOREIGN OBJECTS CLEAR WHEN LOWERING THE JACK INTO PLACE.**
- Carefully place and center your SnapPad under the landing jack foot. Continue to lower the front landing jack until it touches the SnapPad. If you feel that the landing pad is not centered on the SnapPads, retract the landing gear enough to re-center the SnapPads and proceed with extending the landing gear to complete the SnapPad installation.
- Once SnapPad installation is complete on the front landing jacks, the **TRUCK MUST BE DISCONNECTED AND PULLED AWAY** from the RV before installing SnapPads on the rear 2 or 4 leveling jack pads.
- If your lip hasn't fully engaged, use a screwdriver to get behind it to lift the lip of the pad over the top of the foot.
- Wipe off any excess soap and repeat the installation process on the remaining jacks.



SnapPad Mini Square 5 Info & Statistics

- Dimensions: 8.15" wide x 1.75" thick.
- Once installed they add about 1 inch to your jack thickness.
- 2.80 pounds per pad.
- You're helping our environment! SnapPads are made from American recycled tires. That means SnapPads are not only durable and versatile but environmentally friendly too.
- Will work on any type of surface, level or uneven, including: asphalt, concrete, grass, gravel, mud, sand, resin, ice, and snow.
- Scientifically tested to maintain integrity at over 120°F down to -40°F and remain attached at over 50x the force of gravity.
- Generally, it takes over 1,300 pounds of vertical pressure to install your SnapPads. This ensures no matter how far off the beaten path you venture, your SnapPads will be there with you.
- Proudly made in the USA.

HELPFUL HINTS & TRICKS FOR MINI SQUARE 5

- It's best (and easiest) to install your SnapPads one at a time on a level, hard surface.
- However it's been found that some newer landing feet tend to bend under the weight of your RV. Should one of your SnapPads not install immediately this might be the case for you. Remedy this by installing your SnapPad on softer terrain such as grass. This will allow your SnapPad to conform around your landing foot. Once engaged, your SnapPad will remain attached.
- Each leveling system will have it's own manual operation function. Please refer to your owners manual for specific directions.
- Grab a helper! It's safer, faster, and more efficient with two people.
- Use your phone or another person to relay the information between the installer and the person working the controls.
- Install each SnapPad individually and visually confirm the reinforced lip has engaged on the complete diameter. It is critical your SnapPad has been installed fully and correctly.
- Standing water? No problem! Your SnapPad XTRA pads have built-in drainage channels.
- Installation is easier in warm weather (50°F or more).
- If your landing feet are aluminum then disregard the next suggestion:

While not required, we recommend double protecting your jacks by covering the landing feet with a rubberized protectant such as Flex Seal[®]. Make sure to cover your jack cylinders prior to applying and coat the bottom of your landing feet as well. Do this prior to installing your SnapPads and allow the protectant to cure for 24 hours. Do not spray your SnapPads with the sealant (it will not adhere to the rubber).

MINI SQUARE 5 INSTALLATION INSTRUCTIONS

WARRANTY INFORMATION

Origen RV Accessories LTD offers a 2-year manufacturer's warranty on both performance and defects in material and workmanship. Should your product fail within a 2-year time frame, Origen RV Accessories LTD will replace your pad free of charge. Warranty coverage does not extend to Acts of god, misuse of product, improper installation, and damage from external events like accidents.

CONDITIONS

• You must register your product warranty first in order to be able to file a claim later on, if necessary. For more information, visit https://rvsnappad.com/pages/general-warranty

• Origen RV Accessories LTD will replace any defective products within the acceptable 2-year window, starting from the purchase date.

- To submit your warranty claim please visit <u>https://rvsnappad.com/pages/file-a-claim</u>.
- Proof of purchase is required for any warranty redemption on your pads.
- If you need to return your UNUSED pads within 30 days of purchase please contact our Customer Service Agents at info@rvsnappad.com
- Be advised the product must be shipped back to Origen RV Accessories LTD at your cost, meaning you pay the shipping charges for returning any pads.
- Once shipped, email your tracking number to info@rvsnappad.com for confirmation and then your refund will be issued.

Please note: If your SnapPads were purchased from an RV Dealer, Amazon, or other online source we encourage you to contact them for your replacement/refund.

DISCLAIMERS

• SnapPads are an aftermarket RV accessory, and as such, it is the responsibility of the RV owner to ensure they are an appropriate and safe addition to their RV.

• Each RV has unique design considerations. It is the responsibility of the RV owner to confirm their SnapPads have adequate clearance for any moving parts and will not hinder the functionality of any other system.

• Origen RV Accessories LTD shall not be liable for any special, incidental, indirect or consequential damages whatsoever (including but not limited to, labor, installation, charges, damage to associated equipment, RV, trailer, towing or following vehicle) arising from the use or inability to use or install the product.

• Use extreme caution when installing and using SnapPad. Origen RV Accessories LTD is not responsible or liable in any way for any indirect or direct injury sustained during installation or future use of the product.

• Installing SnapPad products on non-compatible leveling systems will result in the voiding of the warranty and can lead to product failure, property damage, or injury. Origen is not responsible for any issues arising from the use of our products on non-compatible systems.

• SnapPads are designed to be installed once. **Do not remove and re-install as this will void your warranty.** *Unless performed by an authorized dealer. Picture confirmation may be necessary to confirm successful reinstallation.