



NanoPlex™ general description

NanoPlex NPS-06-01-04A Universal Relay ISP-Channel Multiplier allows the expansion of the number of channels of ISP-Programming tools, while also offering galvanic isolation. The total number of switched signals is 28. NanoPlex is used on PCBAs production lines, in ATE-controlled ISP programming. Thanks to its ultra-small size (only 51.0- x 66.5-mm), this NanoPlex model takes easily place in Test Fixtures. Designed for piggyback mounting, NanoPlex is universal and compatible with all types of ISP Programming tools.

Recommended Readings - Further Documentation

Before starting, please study the following essential papers:

- *NanoPlex NPS-06-01-04A Data Sheet*
- *NanoPlex NPS-06-01-04A Flexibility Application Note*

'*NanoPlex NPS-06-01-04A Flexibility Application Note*' clearly describes NanoPlex **modularity** and how to deploy **multiple units** in order to create high-density ISP Programming Multipliers with an **unlimited number of channels**.


Renesas RL78F (1-Wire)

Signals required for ISP Programming are:

- TOOL0
- RESET

The most convenient way to ISP program multiple instances of this device through NanoPlex is using this model in **3x12 operating mode**. 3 NanoPlex input channels are multiplied to 12 separated, galvanic isolated output channels.

On the following mode examples diagram, NanoPlex signal names are assigned with aliases (texts are in **bold**).

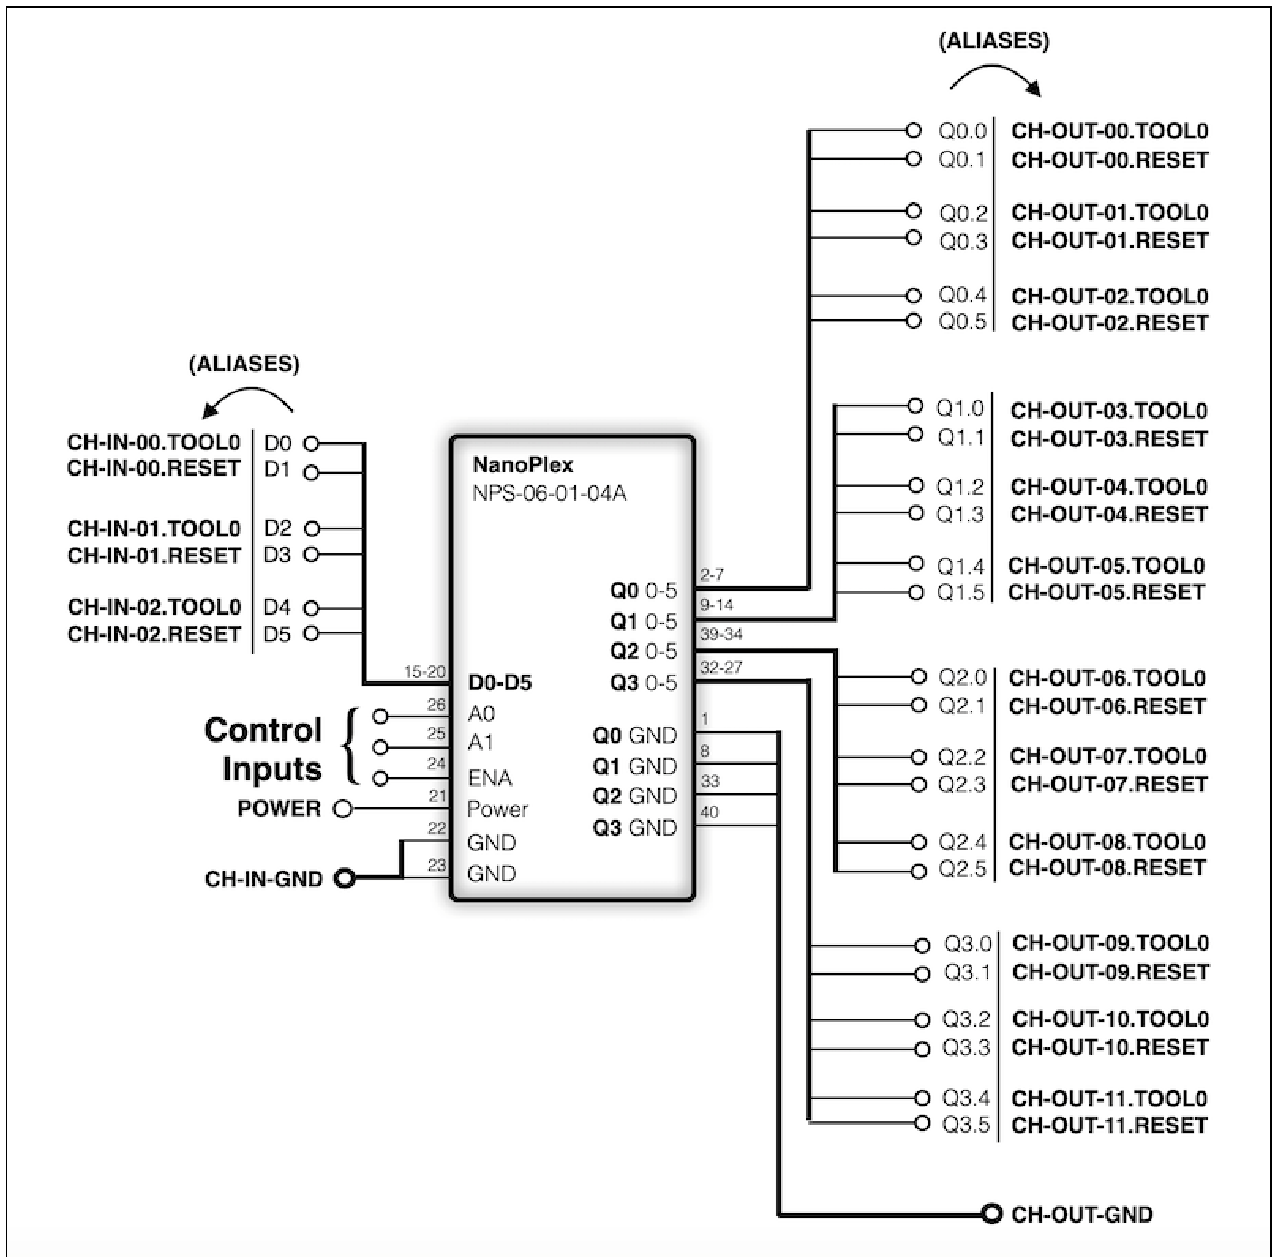

Truth table

(the symbol ► stands for “connected to”)

ENA	A1	A0	CH-IN-	00.TOOL0 ►	00.RESET ►	01.TOOL0 ►	01.RESET ►	02.TOOL0 ►	02.RESET ►
1	0	0	CH-OUT-	00.TOOL0	00.RESET	01.TOOL0	01.RESET	02.TOOL0	02.RESET
1	0	1	CH-OUT-	03.TOOL0	03.RESET	04.TOOL0	04.RESET	05.TOOL0	05.RESET
1	1	0	CH-OUT-	06.TOOL0	06.RESET	07.TOOL0	07.RESET	08.TOOL0	08.RESET
1	1	1	CH-OUT-	09.TOOL0	09.RESET	10.TOOL0	10.RESET	11.TOOL0	11.RESET
0	X	X	CH-OUT-	HI-Z	HI-Z	HI-Z	HI-Z	HI-Z	HI-Z

Operating sequence

ENA = 1

A1-A0 = "00"

CH-IN-00.TOOL0 ► CH-OUT-00.TOOL0
CH-IN-00.RESET ► CH-OUT-00.RESET
CH-IN-01.TOOL0 ► CH-OUT-01.TOOL0

CH-IN-01.RESET ► CH-OUT-01.RESET
CH-IN-02.TOOL0 ► CH-OUT-02.TOOL0
CH-IN-02.RESET ► CH-OUT-02.RESET

A1-A0 = "01"

CH-IN-00.TOOL0 ► CH-OUT-03.TOOL0
CH-IN-00.RESET ► CH-OUT-03.RESET
CH-IN-01.TOOL0 ► CH-OUT-04.TOOL0

CH-IN-01.RESET ► CH-OUT-04.RESET
CH-IN-02.TOOL0 ► CH-OUT-05.TOOL0
CH-IN-02.RESET ► CH-OUT-05.RESET

A1-A0 = "10"

CH-IN-00.TOOL0 ► CH-OUT-06.TOOL0
CH-IN-00.RESET ► CH-OUT-06.RESET
CH-IN-01.TOOL0 ► CH-OUT-07.TOOL0

CH-IN-01.RESET ► CH-OUT-07.RESET
CH-IN-02.TOOL0 ► CH-OUT-08.TOOL0
CH-IN-02.RESET ► CH-OUT-08.RESET

A1-A0 = "11"

CH-IN-00.TOOL0 ► CH-OUT-09.TOOL0
CH-IN-00.RESET ► CH-OUT-09.RESET
CH-IN-01.TOOL0 ► CH-OUT-10.TOOL0

CH-IN-01.RESET ► CH-OUT-10.RESET
CH-IN-02.TOOL0 ► CH-OUT-11.TOOL0
CH-IN-02.RESET ► CH-OUT-11.RESET

Connector pinout (aliases signals, top view)

Pin	Signal
01	CH-OUT-GND
02	CH-OUT-00.TOOL0
03	CH-OUT-00.RESET
04	CH-OUT-01.TOOL0
05	CH-OUT-01.RESET
06	CH-OUT-02.TOOL0
07	CH-OUT-02.RESET
08	CH-OUT-GND
09	CH-OUT-03.TOOL0
10	CH-OUT-03.RESET
11	CH-OUT-04.TOOL0
12	CH-OUT-04.RESET
13	CH-OUT-05.TOOL0
14	CH-OUT-05.RESET
15	CH-IN-00.TOOL0
16	CH-IN-00.RESET
17	CH-IN-01.TOOL0
18	CH-IN-01.RESET
19	CH-IN-02.TOOL0
20	CH-IN-02.RESET

Signal	Pin
CH-OUT-GND	40
CH-OUT-06.TOOL0	39
CH-OUT-06.RESET	38
CH-OUT-07.TOOL0	37
CH-OUT-07.RESET	36
CH-OUT-08.TOOL0	35
CH-OUT-08.RESET	34
CH-OUT-GND	33
CH-OUT-09.TOOL0	32
CH-OUT-09.RESET	31
CH-OUT-10.TOOL0	30
CH-OUT-10.RESET	29
CH-OUT-11.TOOL0	28
CH-OUT-11.RESET	27
A0	26
A1	25
ENA	24
GND (*)	23
GND (*)	22
Power	21

(*) GND at pins 22/23 is used for both Power GND and CH-IN-GND.

Using multiple NanoPlex NPS-06-01-04A units

NanoPlex NPS-06-01-04A product is modular by design. Several units can be deployed in order to set-up a very large, limitless channel-multiplier. The advantage of using more units is a faster and less expensive substitution.

Please read '[NanoPlex NPS-06-01-04A Flexibility Application Note](#)' to discover how to set-up a switching system with the **number of channels as high as your application requires**.

About Manta Systems

Manta Systems is a high-tech company, global leader in high-density signal switching for In-System Programming (ISP) and Testing Systems. The company targets the electronic boards assembly market, where a high number of connections is required. Manta Systems flagship product is NanoPlex™, a series of Channels Multipliers for In-System Programming (ISP) and Testing instruments. NanoPlex is the **world's first universal tool** providing end-user with the possibility of having compact, easy-to-use, professional, reliable In-System Programming (ISP) and Testing Channel Multiplication functionality.

Warranty

All Manta Systems products are covered by a **three-year warranty** against defects and workmanship from the purchase date. The warranty only covers products when properly installed and used.

Orders

All NanoPlex™ Series products are generally **off-the-shelf**.

Shipping is within **24 hours** from order reception.

Free shipping & 30-day money back guarantee.

Disclaimer

Manta Systems is the owner of NanoPlex™ tradename. Manta Systems reserves the right to make improvements to NanoPlex™ Series and its documentation without notice. Information in this document is intended to be accurate and reliable. However, Manta Systems assumes no responsibility for its use; nor for any infringements of rights of third parties which may result from its use.

MANTA SYSTEMS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF.

Copyright © Manta Systems. All rights reserved.

NanoPlex™ is a tradename of Manta Systems.

All other product or service names are the property of their respective owners.

www.mantasys.com

info@mantasys.com

