

### **NanoPlex™ general description**

NanoPlex NPS-06-01-04A Universal Relay ISP-Channel Multiplier allows the expansion of the number of channels of ISP-Programming tools, while also offering galvanic isolation. The total number of switched signals is 28. NanoPlex is used on PCBAs production lines, in ATE-controlled ISP programming. Thanks to its ultra-small size (only 51.0- x 66.5-mm), this NanoPlex model takes easily place in Test Fixtures. Designed for piggyback mounting, NanoPlex is universal and compatible with all types of ISP Programming tools.

### **Recommended Readings - Further Documentation**

Before starting, please study the following essential papers:

- *NanoPlex NPS-06-01-04A Data Sheet*
- *NanoPlex NPS-06-01-04A Flexibility Application Note*

'*NanoPlex NPS-06-01-04A Flexibility Application Note*' clearly describes NanoPlex **modularity** and how to deploy **multiple units** in order to create high-density ISP Programming Multipliers with an **unlimited number of channels**.


### **Renesas R8C (1-Wire)**

Signals required for ISP Programming are:

- RESET
- MODE

The most convenient way to ISP program multiple instances of this device through NanoPlex is using this model in **3x12 operating mode**. 3 NanoPlex input channels are multiplied to 12 separated, galvanic isolated output channels.

On the following mode examples diagram, NanoPlex signal names are assigned with aliases (texts are in **bold**).

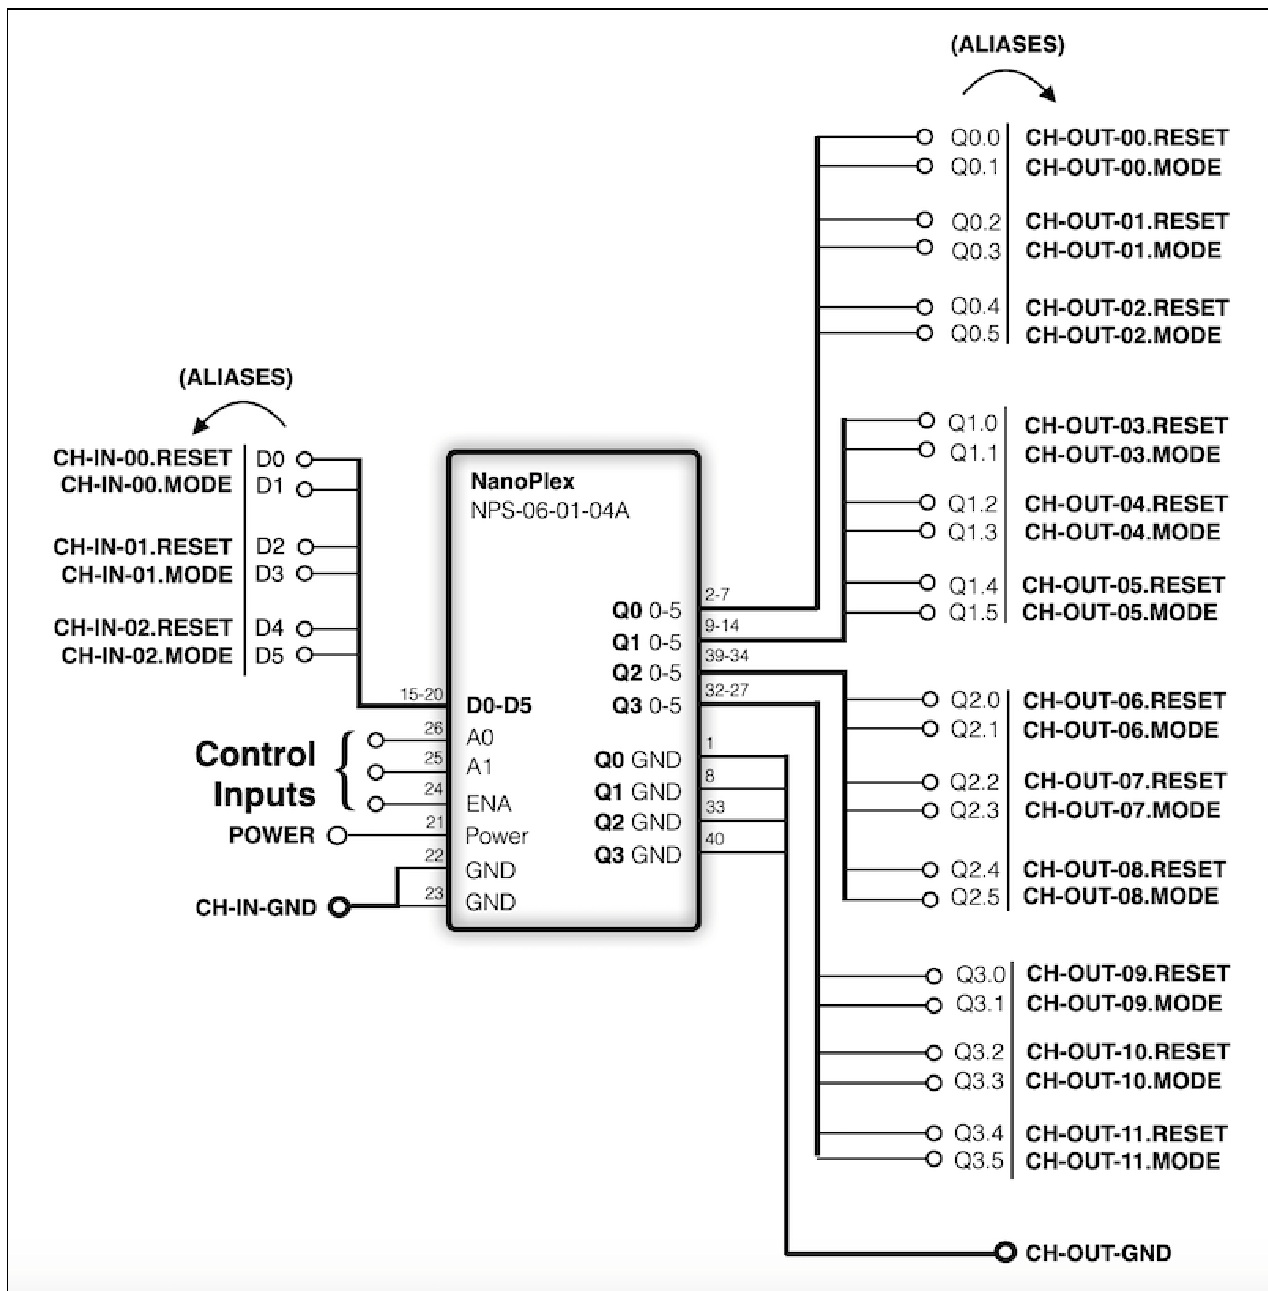

## Truth table

(the symbol ► stands for “connected to”)

ENA	A1	A0	CH-IN-	00.RESET ►	00.MODE ►	01.RESET ►	01.MODE ►	02.RESET ►	02.MODE ►
1	0	0	CH-OUT-	00.RESET	00.MODE	01.RESET	01.MODE	02.RESET	02.MODE
1	0	1	CH-OUT-	03.RESET	03.MODE	04.RESET	04.MODE	05.RESET	05.MODE
1	1	0	CH-OUT-	06.RESET	06.MODE	07.RESET	07.MODE	08.RESET	08.MODE
1	1	1	CH-OUT-	09.RESET	09.MODE	10.RESET	10.MODE	11.RESET	11.MODE
0	X	X	CH-OUT-	HI-Z	HI-Z	HI-Z	HI-Z	HI-Z	HI-Z

## Operating sequence

ENA = 1

A1-A0 = "00"

CH-IN-00.RESET ► CH-OUT-00.RESET  
CH-IN-00.MODE ► CH-OUT-00.MODE

CH-IN-01.RESET ► CH-OUT-01.RESET  
CH-IN-01.MODE ► CH-OUT-01.MODE

CH-IN-02.RESET ► CH-OUT-02.RESET  
CH-IN-02.MODE ► CH-OUT-02.MODE

A1-A0 = "01"

CH-IN-00.RESET ► CH-OUT-03.RESET  
CH-IN-00.MODE ► CH-OUT-03.MODE

CH-IN-01.RESET ► CH-OUT-04.RESET  
CH-IN-01.MODE ► CH-OUT-04.MODE

CH-IN-02.RESET ► CH-OUT-05.RESET  
CH-IN-02.MODE ► CH-OUT-05.MODE

A1-A0 = "10"

CH-IN-00.RESET ► CH-OUT-06.RESET  
CH-IN-00.MODE ► CH-OUT-06.MODE

CH-IN-01.RESET ► CH-OUT-07.RESET  
CH-IN-01.MODE ► CH-OUT-07.MODE

CH-IN-02.RESET ► CH-OUT-08.RESET  
CH-IN-02.MODE ► CH-OUT-08.MODE

A1-A0 = "11"

CH-IN-00.RESET ► CH-OUT-09.RESET  
CH-IN-00.MODE ► CH-OUT-09.MODE

CH-IN-01.RESET ► CH-OUT-10.RESET  
CH-IN-01.MODE ► CH-OUT-10.MODE

CH-IN-02.RESET ► CH-OUT-11.RESET  
CH-IN-02.MODE ► CH-OUT-11.MODE

## Connector pinout (aliases signals, top view)

Pin	Signal
01	CH-OUT-GND
02	CH-OUT-00.RESET
03	CH-OUT-00.MODE
04	CH-OUT-01.RESET
05	CH-OUT-01.MODE
06	CH-OUT-02.RESET
07	CH-OUT-02.MODE
08	CH-OUT-GND
09	CH-OUT-03.RESET
10	CH-OUT-03.MODE
11	CH-OUT-04.RESET
12	CH-OUT-04.MODE
13	CH-OUT-05.RESET
14	CH-OUT-05.MODE
15	CH-IN-00.RESET
16	CH-IN-00.MODE
17	CH-IN-01.RESET
18	CH-IN-01.MODE
19	CH-IN-02.RESET
20	CH-IN-02.MODE

Signal	Pin
CH-OUT-GND	40
CH-OUT-06.RESET	39
CH-OUT-06.MODE	38
CH-OUT-07.RESET	37
CH-OUT-07.MODE	36
CH-OUT-08.RESET	35
CH-OUT-08.MODE	34
CH-OUT-GND	33
CH-OUT-09.RESET	32
CH-OUT-09.MODE	31
CH-OUT-10.RESET	30
CH-OUT-10.MODE	29
CH-OUT-11.RESET	28
CH-OUT-11.MODE	27
A0	26
A1	25
ENA	24
GND (*)	23
GND (*)	22
Power	21

(\*) GND at pins 22/23 is used for both Power GND and CH-IN-GND.

### Using multiple NanoPlex NPS-06-01-04A units

NanoPlex NPS-06-01-04A product is modular by design. Several units can be deployed in order to set-up a very large, limitless channel-multiplier. The advantage of using more units is a faster and less expensive substitution.

Please read '[NanoPlex NPS-06-01-04A Flexibility Application Note](#)' to discover how to set-up a switching system with the **number of channels as high as your application requires**.

## About Manta Systems

Manta Systems is a high-tech company, global leader in high-density signal switching for In-System Programming (ISP) and Testing Systems. The company targets the electronic boards assembly market, where a high number of connections is required. Manta Systems flagship product is NanoPlex™, a series of Channels Multipliers for In-System Programming (ISP) and Testing instruments. NanoPlex is the **world's first universal tool** providing end-user with the possibility of having compact, easy-to-use, professional, reliable In-System Programming (ISP) and Testing Channel Multiplication functionality.

## Warranty

All Manta Systems products are covered by a **three-year warranty** against defects and workmanship from the purchase date. The warranty only covers products when properly installed and used.

## Orders

All NanoPlex™ Series products are generally **off-the-shelf**.

Shipping is within **24 hours** from order reception.

**Free shipping** & 30-day money back guarantee.

## Disclaimer

Manta Systems is the owner of NanoPlex™ tradename. Manta Systems reserves the right to make improvements to NanoPlex™ Series and its documentation without notice. Information in this document is intended to be accurate and reliable. However, Manta Systems assumes no responsibility for its use; nor for any infringements of rights of third parties which may result from its use.

MANTA SYSTEMS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF.

Copyright © Manta Systems. All rights reserved.

NanoPlex™ is a tradename of Manta Systems.

All other product or service names are the property of their respective owners.

[www.mantasys.com](http://www.mantasys.com)

[info@mantasys.com](mailto:info@mantasys.com)

